


## Timer switch installation

Install the timer switch into the socket base by pressing the switch into place. The 0-1 switch must then be positioned at the upper left.

## Timer switch setting

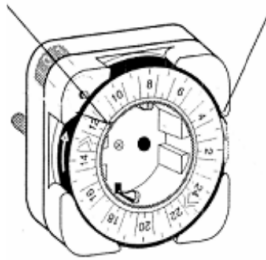

1. Set the timer to the correct time by turning the outer ring clockwise.
2. Set the departure time by pressing the outer ring and turning it counterclockwise at the same time.
3. Heating starts 2 hours before the set departure time (arrow marking).

## Use of the outdoor socket box

-  The cover of the outdoor socket box must be kept locked, and the connection cable must be removed from the socket when the vehicle is disconnected from the cable.
-  The operation of any residual-current device (RCD) must be tested monthly using its own test button.
-  Continuous loads exceeding 8 A per socket are not recommended.

## Maintenance

The device does not require any specific maintenance procedures.